



# Automatic mechanical pencil

Use and Care Guide \* Please read before use

 



www.pilot.co.jp


\$30 is a mechanical pencil with the Automatic system that extends a lead automatically without clicking.

#### How to use

- Press the knob once and expose the guide pipe.
- The lead extends automatically until a piece of lead finishes when writing without exposing the lead from the guide pipe.
  \*\*The Automatic system does not operate when written with the lead exposed.
- ■To retract the lead exposed from the guide pipe, push on the lead end while pressing the knob.
- To refill leads, remove the knob and eraser, and put new leads into the lead reservoir.
- ●The lead reservoir is designed to hold maximum of 6 pieces of leads. If too many leads are inserted, some leads may not properly pass into the guide pipe.
- •When first use after refilling leads, press the knob a few times until the lead appears from the guide pipe.



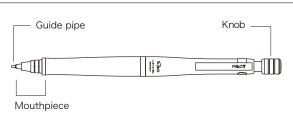

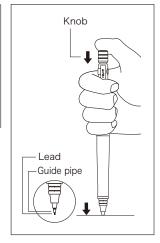

# When the guide pipe recedes during writing


When the lead has become too short, it will retract even after pressing the knob once. In this case, pull out the remaining lead while pressing the knob. Then press the knob several times until a new lead is set correctly in place in the guide pipe.

 
## How to clear a lead jam


If a new lead in the reservoir does not extend properly, disassemble the pen following the procedures below to clean the mouthpiece, chuck, etc.

- ① Unscrew the mouthpiece anti-clockwise as illustrated in the Fig. A.
- ② Press the knob and expose the chuck part as illustrated in the Fig. B.
- ③ While pressing the knob, pull out the chuck part as illustrated in the Fig. C.
- Remove the stuck lead in the mouthpiece or chuck, using another lead as illustrated in the Fig. D.

⑤To re-assemble the pen, follow the disassembly procedures in reverse. Please take extra care while assembling.

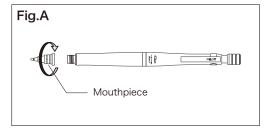



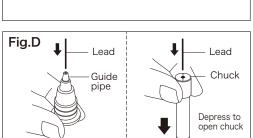

Knob

#### Refill

●Use PILOT lead refills. ●Eraser refills (HERFS-10) are also available.

### Caution

- Do not use except for writing.
- Handle with care, as the point is sharp.
- Be careful not to put small parts such as knob, eraser or mouthpiece into mouth.
- •Keep away from children.

Fig.B

Chuck

Do not store in places exposed to direct sunshine or high temperatures.