




FRIXION BALL SWITCH / Use and Care Guide

Do not use on official documents, addresses, or anything that should not be erased.

How to use

- The black, red, and blue slide levers use refills with erasable FRIXION ink. [Fig.1]
- The black clip slide lever uses non-erasable oil-based ink. [Fig.2]

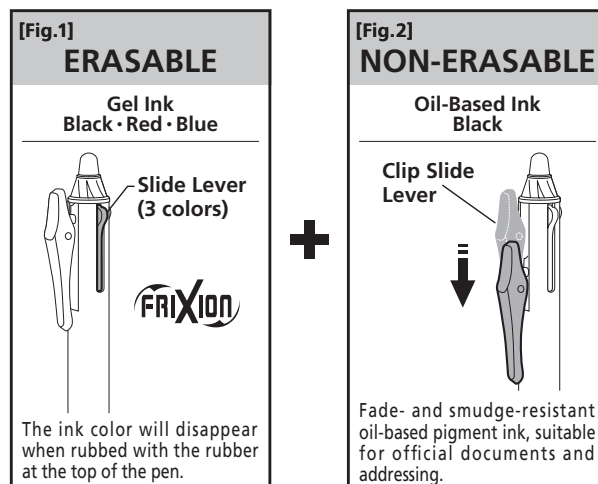

Remarks

- Do not use on official documents, addresses, or anything that should not be erased.
- Do not store in places exposed to direct sunlight or high temperatures. Do not keep at temperatures of 60°C or more, or the ink becomes colorless.
- At temperatures around -10°C or lower, the erased color may reappear and become visible again.
- To erase, use the attached rubber or a separately sold FRIXION eraser.
- Please do not use for writing on anything other than paper.
- Depending on the type of paper, such as thermal paper, or the characteristics of the printed paper, there could be cases where this erasure method cannot work properly.
- If rubbed by an eraser with stains, the surface of the paper can get dirty. Use the eraser after cleaning it off.
- Only use the ink for writing and drawing.
- Keep away from children.
- To prevent ink leakage, never write with the ballpoint pen tip upwards.
- Avoid severe impacts or violent shaking because ink may leak.
- Always replace the cap / retract the tip after use.
- Note that it may not be possible to remove this ink if it accidentally gets on your clothes.