



Use and Care Guide

MULTI-FUNCTIONS PEN



<http://www.pilot.co.jp/>

PILOT 2+1, 3+1 and 4+1 Series—a combination of mechanical pencil and ballpoint pen, all in one. Total of 4 kinds of PILOT 2+1, 3+1 and 4+1 Series are available: Revolving type, Retractable & Twist type, Retractable & Button and Lever Slide type.

 
 
 
Revolving (4+1 · 3+1 · 2+1)

●How to use the ballpoint pen

- (1) Turn the upper barrel to make the tip come out.
- (2) To retract the tip, turn the upper barrel to the opposite direction.

●How to use the mechanical pencil

- (1) Turn the upper barrel to make the mechanical pencil come out. Press the eraser cap to make the lead come out.
- (2) To retract the lead, press the lead onto the paper while pushing the eraser cap down.
- (3) To retract the writing unit to its original position, turn the upper barrel anticlockwise.
- (4) Unscrew the eraser cap off to use the eraser.

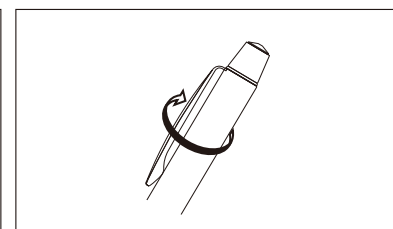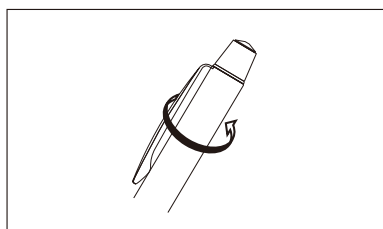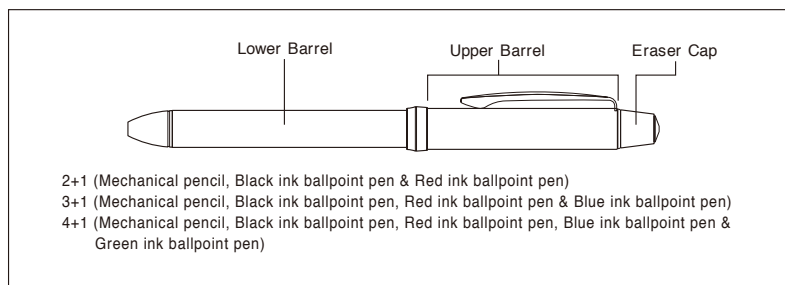




Retractable & Twist Type (3+1 · 2+1)

●How to use the ballpoint pen

- (1) While seeing the indication mark, press the eraser cap and a tip of the colour of the indication mark comes out.
- (2) Twist the upper barrel to the right while holding the lower barrel to retract the tip.

●How to use the mechanical pencil

   - (1) While seeing the mechanical pencil mark, press the eraser cap and the writing unit for the mechanical pencil comes out. Then, press the eraser cap to make the lead come out.
- (2) Twist the upper barrel to the right while holding the lower barrel to return the writing unit to its original position, same as for the ballpoint pen.
- (3) Unscrew the eraser cap off to use the eraser.

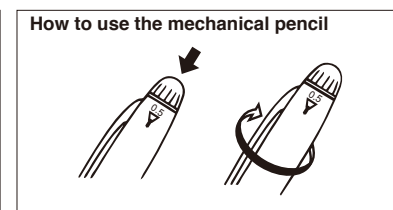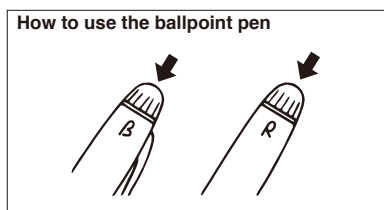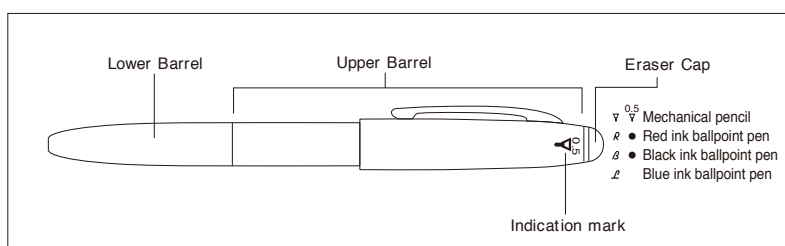




Retractable & Button Type (2+1)

●How to use the ballpoint pen

- (1) While seeing the indication mark (B or R), press the knob and a tip of the colour of the indication mark comes out.
- (2) To retract the writing tip, press the button on clip.

●How to use the mechanical pencil

   - (1) While seeing the mechanical pencil mark, press the knob and the writing unit for the mechanical pencil comes out. Then, press the knob to make the lead come out.
- (2) To retract the lead, press the lead onto the paper while pushing the knob down.
- (3) To retract the writing unit, press the button on clip.
- (4) Pull the knob to use the eraser.

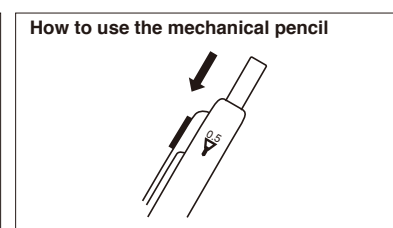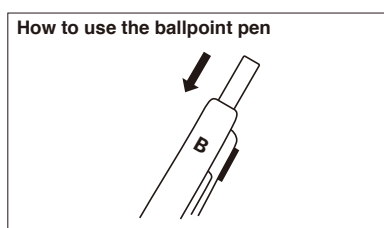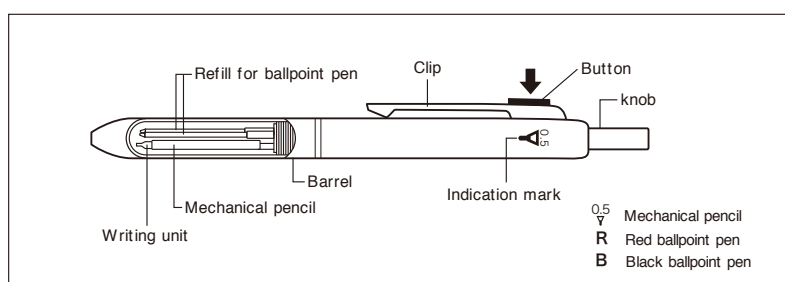


Lever Slide Type (4+1 · 2+1)

●How to use the ballpoint pen


- (1) Slide the lever with indication mark (B or R) and a refill of the indication colour (B=Black or R=Red) comes out.
- (2) To retract the writing tip, slide other lever.

●How to use the mechanical pencil

 
- (1) Slide the lever with indication mark ($\frac{0.5}{\text{V}}$ · 0.5) and the writing unit for the mechanical pencil comes out. Press the cap to make the lead come out.
 - * In case of 4+1 Wood, slide the clip down and the mechanical pencil comes out. Click the clip to make the lead come out.
- (2) To retract the lead, press the lead onto the paper while pushing the eraser cap down.
 - * In case of 4+1 Wood, press the lead onto the paper while pushing the clip down.
- (3) To retract the writing unit, slide other lever.
- (4) Unscrew the eraser cap off to use the eraser.
 - * In case of 4+1 Wood, pull out the eraser cap.

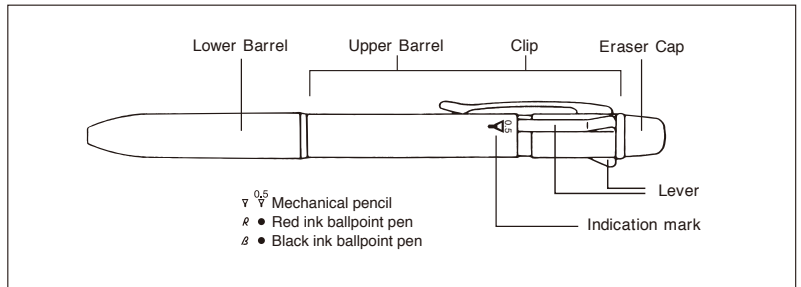

How to use the ballpoint pen

 

How to use the mechanical pencil

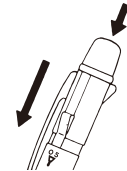 

Replacing a used refill with a new one

<p>[1]</p>	<p>[2]</p>	<p>[3]</p>	<p>[4]</p>
<p>Unscrew the lower barrel off.</p> <p>* In case of 4+1 CUSTOM HERITAGE, 2+1 EVOLT SLIM, LEGNO and RIDGE, hold the upper barrel and pull out the lower barrel.</p>	<p>Pull the empty refill out.</p>	<p>Insert a new refill completely into the refill holder.</p>	<p>Reassemble the pen by firmly screwing the barrels.</p> <p>* In case of 4+1 CUSTOM HERITAGE, 2+1 EVOLT SLIM, LEGNO and RIDGE, put the barrels back in place.</p>

How to refill with new leads

<p>[1]</p>		<p>[2]</p>	<p>[3]</p>	<p>[4]</p>	<p>[5]</p>
<p>Unscrew the lower barrel off.</p> <p>* In case of 2+1 EVOLT SLIM, LEGNO and RIDGE, hold the upper barrel and pull out the lower barrel.</p>	<p>In case of Retractable & Twist type, while seeing the mechanical pencil mark, press the eraser cap to make the writing unit to come out.</p>	<p>Hold the pen at upright position and pull the writing unit.</p>	<p>Insert up to 3 leads in total.</p> <p>* Inserting 4 or more leads may cause the guide pipe to clog.</p>	<p>Firmly place the removed writing unit back in its original position.</p>	<p>Reassemble the pen by firmly screwing the lower barrel.</p> <p>* In case of 4+1 CUSTOM HERITAGE, 2+1 EVOLT SLIM, LEGNO and RIDGE, put the cap back in place.</p>

Refills for ballpoint pens and spare leads for mechanical pencils

- Please ask specifically for PILOT BRFS-10F (ball dia. of 0.7mm), BRFS-10EF(0.5mm), BRFS-10M(1.0mm) oil-based Acro-ink ballpoint pen refills. For lever slide-type pens, please specify BTRF-6F(0.7mm), BRFS-10EF(0.5mm), BRFS-10F(0.7mm), BRFS-10M(1.0mm), BVRF-8EF(0.5mm) or BVRF-8F(0.7mm).
- * The easiest way to find the right ballpoint pen refill is to bring the refill that you usually use as a sample.
- Please use "PILOT NEOX GRAPHITE 0.5mm" leads. There are 10 leads degree.

Remarks

- Do not use except for writing.
- Keep away from children.
- To prevent ink leakage, never write with the tip upwards.
- Do not give severe shocks such as dropping or hard shaking,
- as the writing unit or the pencil leads may be damaged.
- The stains on the clothes may not wash off because of oil based ink.
- Always retract the writing tips after use.